


FRONT NON-DRIVE AXLES

**I-50, I-60, I-75, I-80,
I-90, I-108, I-120,
and I-132 Models**

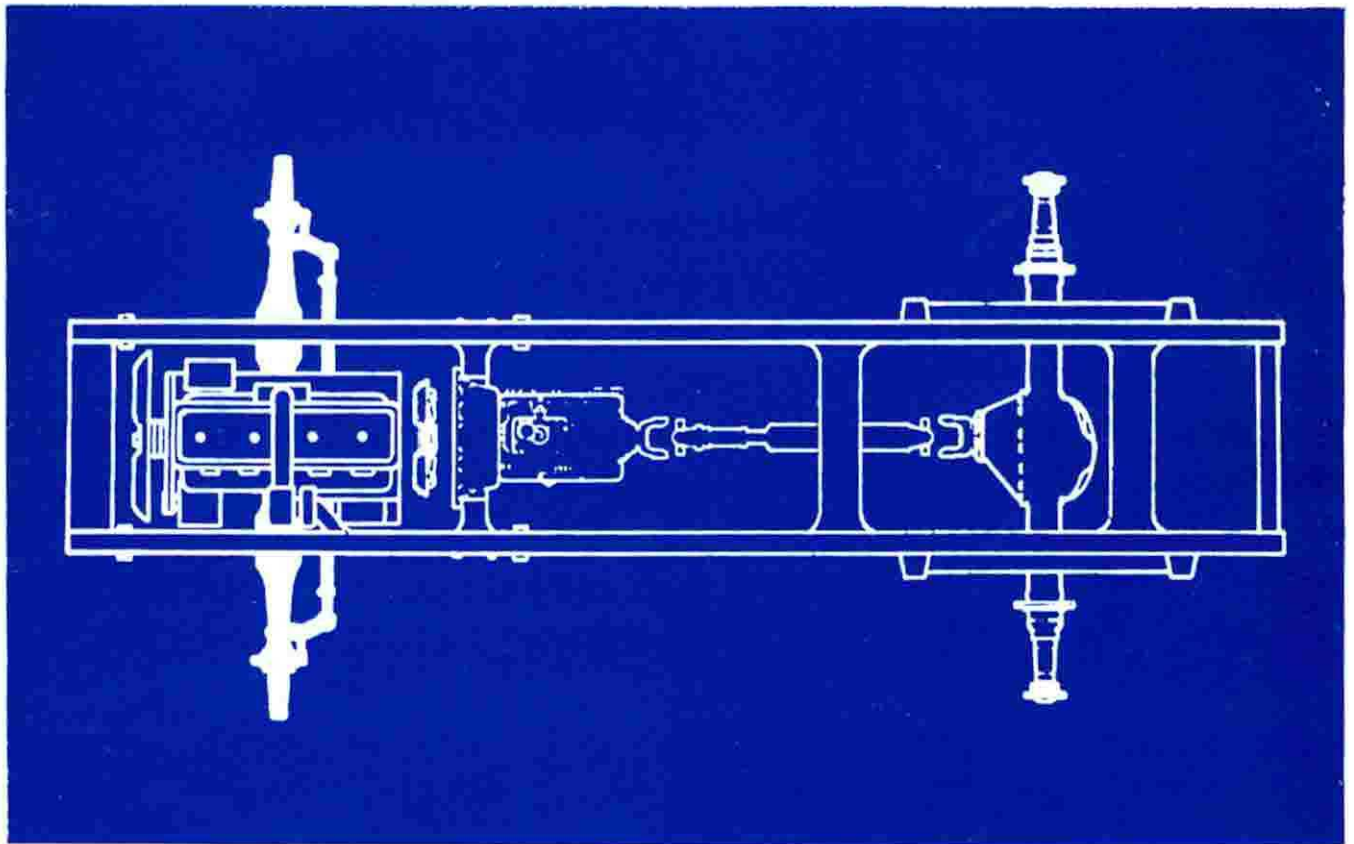

SPICER®



CONTENTS

PAGE

AXLE IDENTIFICATION.....	1
GENERAL PRECAUTIONS FOR ASSEMBLY AND DISASSEMBLY.....	2
CLEANING AND INSPECTION.....	3
WHEEL BEARING ADJUSTMENT.....	4
KING PIN TO BUSHING CLEARANCE CHECK.....	5
KNUCKLE VERTICAL MOVEMENT CHECK.....	5
TIE ROD CONDITION CHECK.....	6
WHEEL ALIGNMENT PROCEDURES.....	7,8
RECOMMENDED MAINTENANCE SCHEDULE.....	9
SPECIFICATIONS.....	9
TORQUE CHART.....	9
WHEEL BEARING REPACKING.....	10,11
LUBE CHANGE AND LUBRICANT RECOMMENDATIONS.....	11
KNUCKLE AND KING PIN DISASSEMBLY.....	12,13
KNUCKLE AND KING PIN ASSEMBLY.....	14,15
KING PIN INSTALLATION.....	15,16

SPICER®



King pin bushing and reaming
tools are available from:

Kent Moore Tools,
Heavy Duty Division
29784 Little Mack
Roseville, MI. 48066-2298
Telephone 313-774-9500

SPICER SERVICE PARTS

Spicer Heavy Axle Service Parts for heavy truck installations are manufactured under the same rigid specifications as are original equipment axle components. This assures the end user who uses genuine Spicer Service Parts maximum reliability for his Spicer Heavy Axle assembly.

Should an axle assembly require component parts replacement, it is recommended that "Original Equipment" replacement parts be used. They may be obtained through your original equipment manufacturer dealer. The use of non-original equipment replacement parts is not recommended as their use may cause unit failure and or affect vehicle safety and warranty.
