


MODEL 80

SINGLE-SPEED AXLE

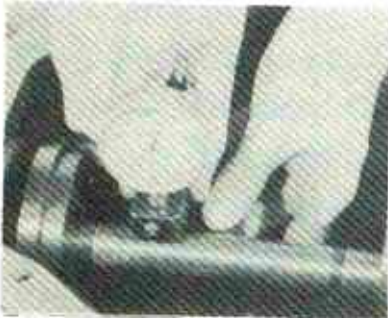

MAINTENANCE

MANUAL

By Spicer Model 80
Single-Speed Axle

SPICER[®]



INDEX

SECTION 1 GENERAL INFORMATION

	PAGE
Important Safety Notice	1-1
Safety Precautions	1-2
Axle Identification	1-3
Servicing Components Not Covered In This Manual	1-3
Vehicle Storage or Prolonged Inoperation	1-3
Exploded View of Axle Assembly	1-4
Parts Description	1-4

SECTION 2 SERVICE TOOLS

Procurement	2-1
Service Tool Part Numbers and Description	2-1

SECTION 3 CARRIER SECTION - SERVICE PROCEDURES

Disassembly	3-1
Ring Gear Removal	3-2
Servicing Standard Differential Case Assembly	3-2
Case Disassembly	3-2
Case Reassembly	3-3
Drive Pinion Removal	3-4
Ring Gear & Pinion Gear Assembly (Theory)	3-5
Establishing Pinion Gear Depth Using Service Tool Gages	3-6
Assembly of Differential	3-11
Worksheet for Calculating Ring Gear Backlash & Differential	
Bearing Preload Shims	3-13
Applying RTV Silicone Gasket Sealer to Cover Plate	3-15

SECTION 4 SPECIFICATIONS

Differential Lubrication	4-1
Axle Lubricant Change Schedule	4-1

Wheel Bearing Lubrication	4-1
Submersion or Deep Water Fording	4-1
RTV Silicone Rubber Sealer Specification	4-2
Fastener Strength Identification	4-2
Wrench Tightening Torque Specifications	4-3
Pinion Bearing and Differential Bearing Preload Specification	4-3
Backlash Specification-Drive Gear to Drive Pinion	4-3
Drive Pinion Gear Depth Specification	4-3
Wheel Bearing Specification	4-3